

## Quick Installation Guide for Wireless Broadband Router

(The specification is subject to change without notice.)

### A. Hardware Installation

1. **Set up LAN connection:** connect an Ethernet cable from your computer's




Ethernet port to one of the LAN ports of this product.

2. **Set up WAN connection with your router:** connect the network cable from your cable (DSL) modem to the WAN port of this product.
  3. **Connect this product with your printer:** connect the printer cable to the printer port of this product and that of your printer individually.
- B. Make the correct TCP/IP settings for your PC:**

1. Install the TCP/IP protocol for your PC if it has not yet been installed.
2. From the Windows **Start** button on your PC, choose **settings**, and select the **Control Panel** item.

3. Double click the **Network** icon. Select the TCP/IP line that has been associated to your network card in the **Configuration** tab of the Network window.

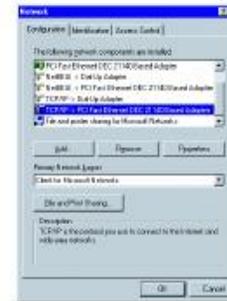

4. Click on the **Properties** button. Click the **IP Address** tab. Select **Obtain An IP Address Automatically**.



5. Click the **Gateway** tab. Clear all of the gateway settings. Click on the **OK** button.


Note: If you want to set the IP of your PC manually, please refer to the User Manual.



**channel 13** for European (ETSI); **channel 14** for Japan.

1. **WEP:** disable

### C. Wireless Settings

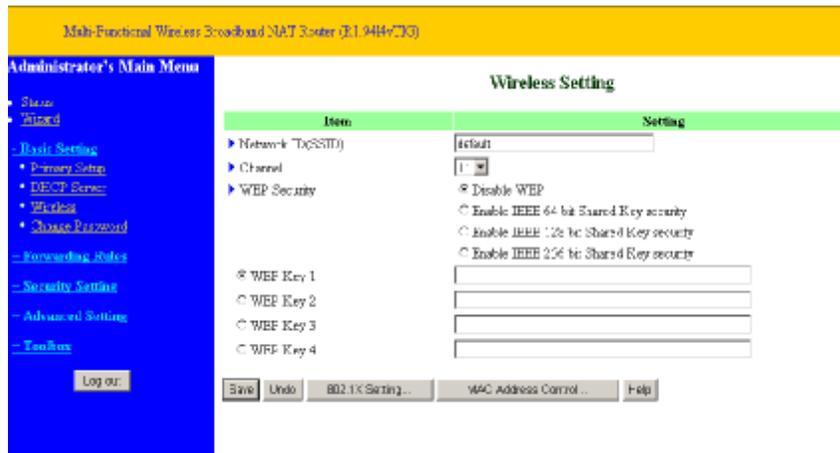

The settings for Wireless function are as follows:

1. **SSID:** default

2. **Channel:** The factory setting is as follow: **channel 11** for North America;